

# *Remote Control*

Owner's Manual



# Using The Remote Control




The new wireless remote control connects to the built-in receiver inside the connection port wirelessly. All button features and functions found on your fountain are also available on your remote control.

**Note:** The new remote control is not compatible with previous models of Bernini™ Fountains.

## Button Functions

The A B C D function buttons on the Remote Control are identical to the A B C D function buttons located on the base of the fountain. Your fountain will operate the same using the control buttons on the base as using the buttons on your remote. The range of your remote is approximately 30 ft.

How each function works on you remote control system.

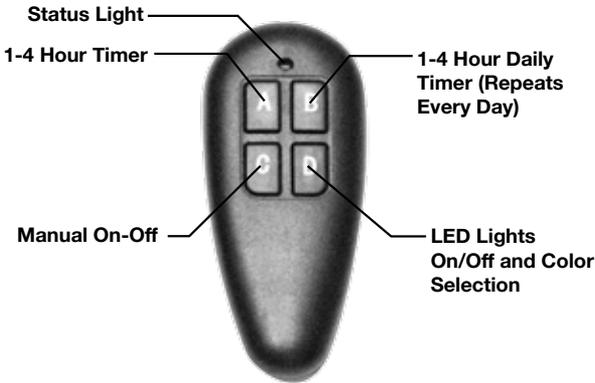

BUTTON	DESCRIPTION
<b>A</b> (1-4 Hour Timer)	Runs the fountain for 1-4 hours with automatic shut off.  <b>One hour operation:</b> press the A button once for your fountain to turn on with an automatic shut-off after one hour of operation. <b>Two hour operation:</b> press the A button twice and your fountain will automatically shut-off after two hours of operation. <b>Three hour operation:</b> press the A button three times and your fountain will automatically shut-off after three hours of operation. <b>Four hour operation:</b> press the A button four times and your fountain will automatically shut-off after four hours of operation.

BUTTON	DESCRIPTION
<b>A (1-4 Hour Timer)</b> <i>continued</i>	<p><b>How To Use This Function:</b></p> <ol style="list-style-type: none"> <li>1. Press the A button one, two, three or four times to turn your fountain on for the desired automatic run time.</li> <li>2. The Status Light will blink once for each hour you have selected to confirm your fountain's 1-4 Hour Timer, up to four hours.</li> <li>3. At the end of the desired interval, your fountain will automatically turn off.</li> </ol>
<b>B (1-4 Hour Daily Timer)</b>	<p><b>This function is the same as the 1-4 Hour Timer (button A) except with the added feature of automatically turning your fountain on at the same time the next day for the interval you selected.</b></p> <p><b>One hour operation:</b> press the B button once for your fountain to turn on and it will automatically shut-off after one hour of operation and repeat daily at the same time.</p> <p><b>Two hour operation:</b> press the B button twice and your fountain will automatically shut-off after two hours of operation and repeat daily at the same time.</p> <p><b>Three hour operation:</b> press the B button three times and your fountain will automatically shut-off after three hours of operation and repeat daily at the same time.</p> <p><b>Four hour operation:</b> press the B button four times and your fountain will automatically shut-off after four hours of operation and repeat daily at the same time.</p> <p><b>How To Use This Function:</b></p> <ol style="list-style-type: none"> <li>1. Select the amount of time you would like the fountain to run by pressing the B button one, two, three or four times.</li> <li>2. Your fountain will then run for the selected amount of time and at the end of the selected duration it will automatically turn off. Then your fountain will automatically turn on at the same time the next day for the run time duration you selected.</li> <li>3. If you turn the LED lights on while using the 1-4 Hour Daily Timer function, the lights will automatically turn on with your fountain and turn off at the end of the selected interval.</li> </ol>
<b>C (Manual On/Off)</b>	<p>Turns the fountain on and off without any timer. Can be used when extended run times are desired. <b>Note:</b> Fountain will run until the battery loses its charge.</p>
<b>D (LED Lights On/Off and Color Selection)</b>	<p>Turns LED light feature on and off manually. Press button once for the LED lights to cycle through colors. If you'd like your fountain to stay at just one color, press the button once more to save your color selection at the desired color. The selected LED light color will be saved until button is pressed again, which will begin the cycling of colors once more.</p> <p><b>LED Light features will automatically turn on and selected color will remain and will turn off whenever your fountain automatically or manually turns on or shuts off (including any timer setting).</b></p>
<b>Status Light</b>	<p>Status light will blink to show wireless connection to the connection port while pressing any of the above function buttons on your remote control.</p>

## Remote Control Supplemental Instructions

### Replace watch batteries:

1. Use a flat screwdriver to gently pry open the remote control.
2. Remote control requires (1) CR2032 button cell batteries (included).
3. Old batteries should be recycled or disposed of as per state and local guidelines.
4. Note polarity when installing new battery.
5. Install new battery.
6. Press the two halves of remote control together.



## **IMPORTANT SAFETY INSTRUCTIONS**

**Remember to keep small button cell batteries away from small children as they can be easily swallowed.**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **Remember!**

If you ever need help, you can  
contact our customer care at:

**+1 (888) 648-2011**



**Yeiser Research & Development**  
9545 Pathway St. Santee, CA 92071, Phone: +1-888-648-2011

**WORLDWIDE PATENTS PENDING, 2015**

Made in China